




Sony Vaio Tap 11 Battery Replacement

This guide replaces the battery.

Written By: Alexander Bridges

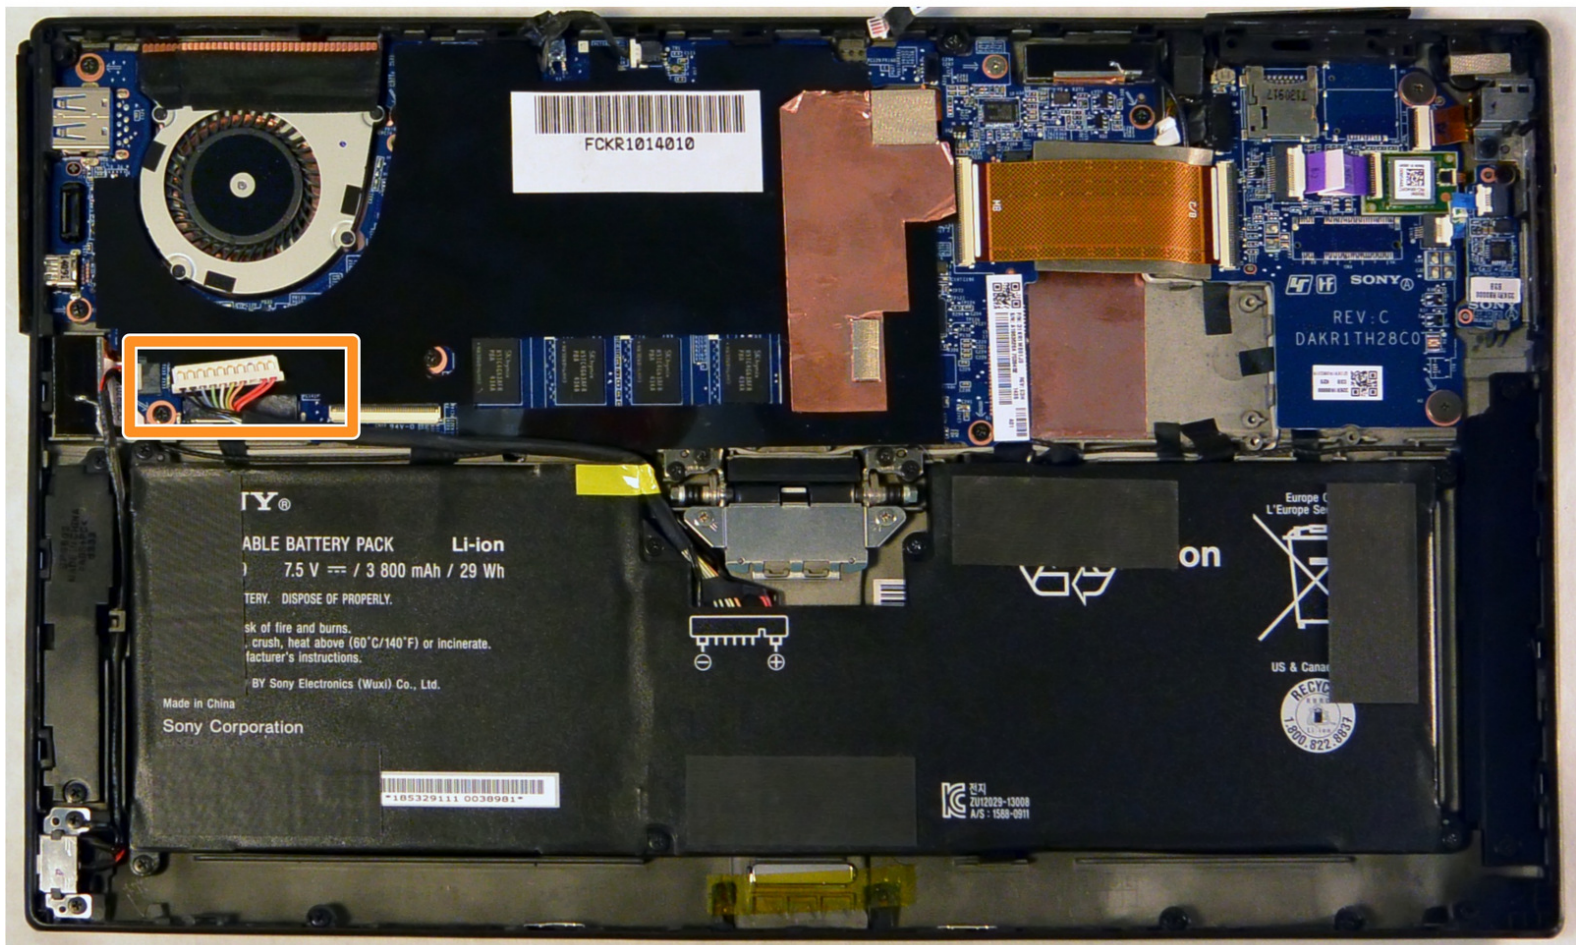

INTRODUCTION


If your device no longer takes a charge, replacing the battery may breathe new life into the tablet.

Step 1 — Screen Assembly




- Begin by popping open the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

Step 2

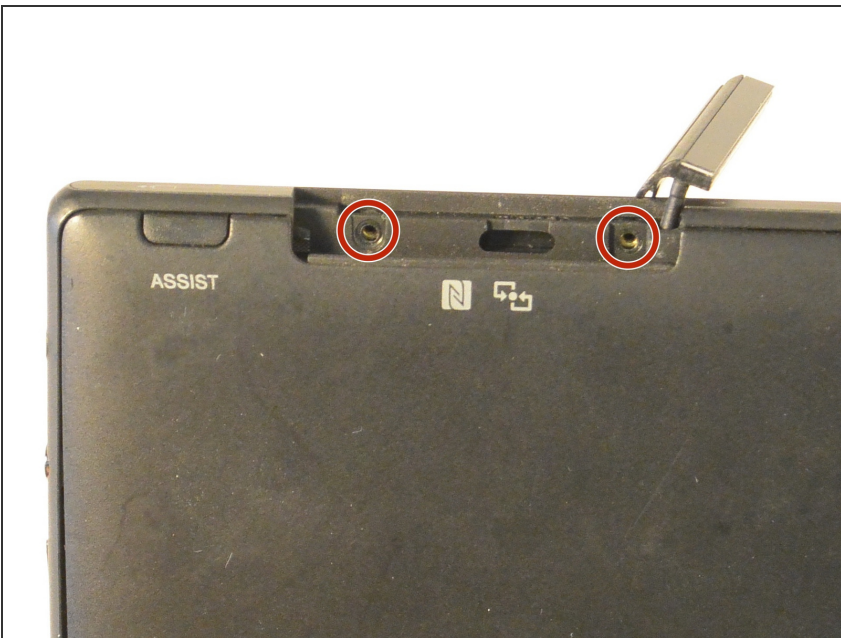

- There are two #000 headed, 3 mm long screws under a similar cover covering the Micro SD slot on the top side of the device.
- Remove the two screws beneath the Micro SD card slot cover.


Step 3

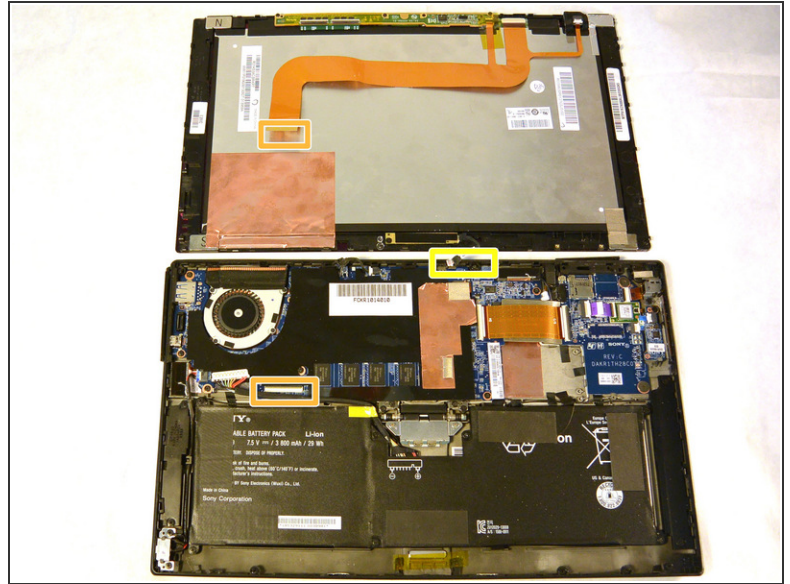

- Attach the suction cup to the top right area of the screen.
- Pull to remove the screen from the rest of the device.


⚠ Watch out for the front camera cable connected to the top middle of the device. The display ribbon cable should just slide out.

Step 4 — Battery

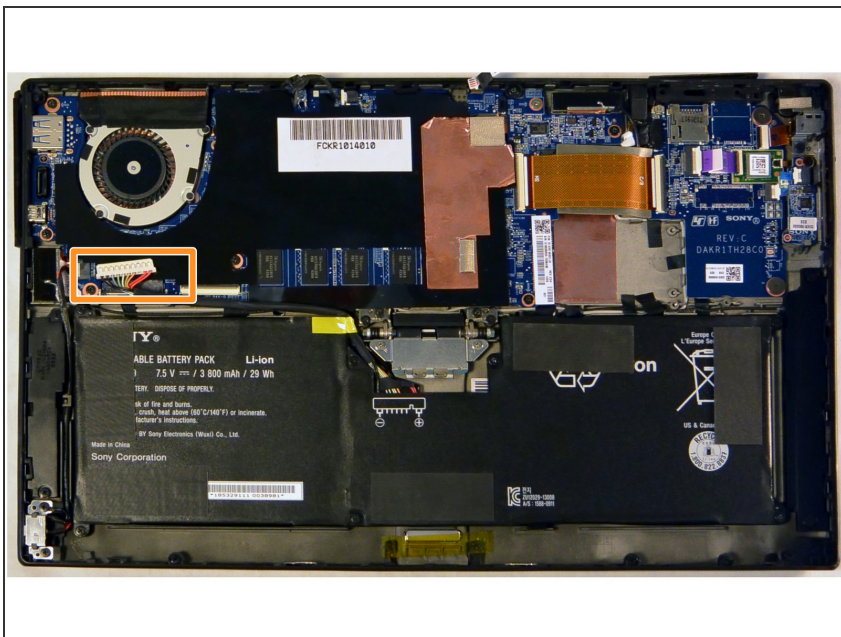

- Disconnect the battery from the motherboard by pulling out the cable below the fan.

Step 5

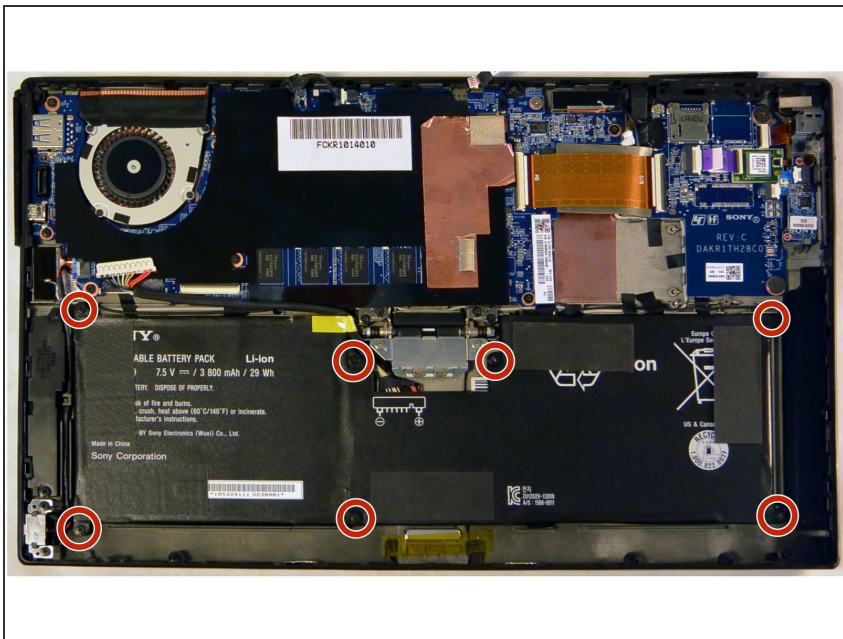

- Remove the seven 3 mm Phillips #000 screws that hold the battery in place.
- Carefully remove the battery from the back assembly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 10:57:01 PM.